


CTL® Chromebook J5

User Manual

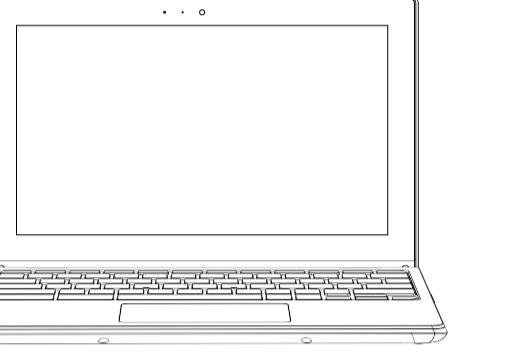


ctl
COMPUTE ■ TEACH ■ LEARN
www.ctl.net


Please read carefully before use.

1. Getting started


1.1 Turn on your Chromebook
Connect the power adapter and turn on your Chromebook. The power button is located at the right side of your Chromebook.

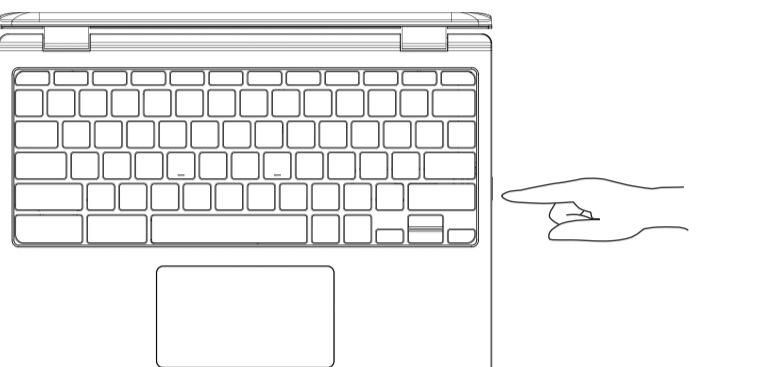

1.2 Connect to your network and wait for update to finish
Select your wireless network from the "Select a network" list to connect to the internet. If your network access is protected, you will need to input the password to connect. Once connected to the internet, accept the terms of service. Your Chromebook will then download any available system updates, so you automatically get the latest Chrome OS features.

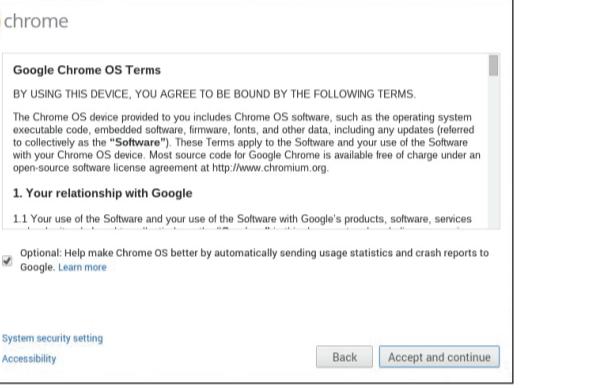

1.3 Sign in to your Google account
If you already have a Google Account, enter your username and password to sign in. If you don't have one, click "More options" to create new account. A Google Account gives you access to useful web services developed by Google, such as Gmail, Google Docs and Google Calendar.

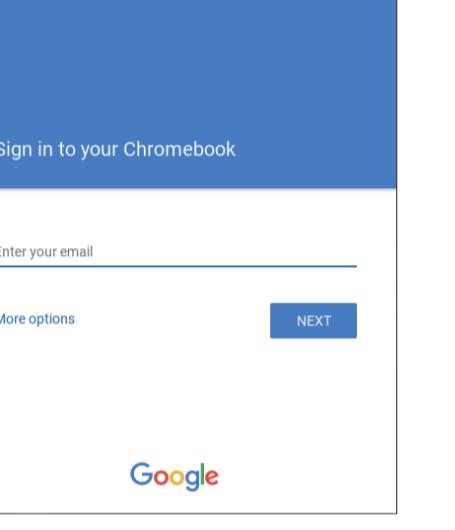


Important: Sign in with your primary Google Account. This account will be set as the owner and is the only account that will be able to change certain Chrome settings.

Tip: There are four modes for your Chromebook, laptop mode, stand mode, tent mode and tablet mode. The keyboard and the touchpad is only available at the laptop mode.

2. Your Chromebook tour

Now that you are done setting it up, let us show you around your new Chromebook.

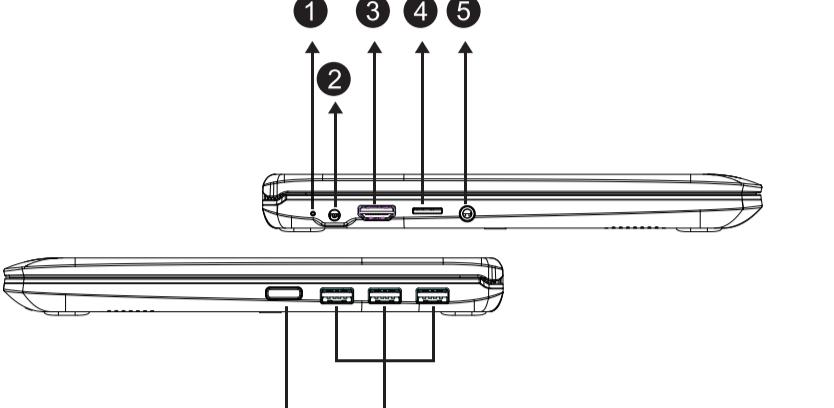


#	Item	Description
1	LED lights	Indicates the Chromebook's status.
2	DC-in	Connects to the charger.
3	HDMI port	Supports high-definition video connections.
4	Micro SD card reader	Supports Micro SD card (TF card)
5	Audio jack	Connects to audio devices (e.g., speakers, headphones), or a headset with microphone.
6	Power button	To power on or off your Chromebook
7	USB ports	Connects to USB devices.

正面

3. Shortcut keys

To help you find things quickly, your Chromebook keyboard has special shortcut keys, including a dedicated search key. The shortcut keys make it easy to get around online and control your Chromebook, and the search key lets you search your apps and the web at the same time.

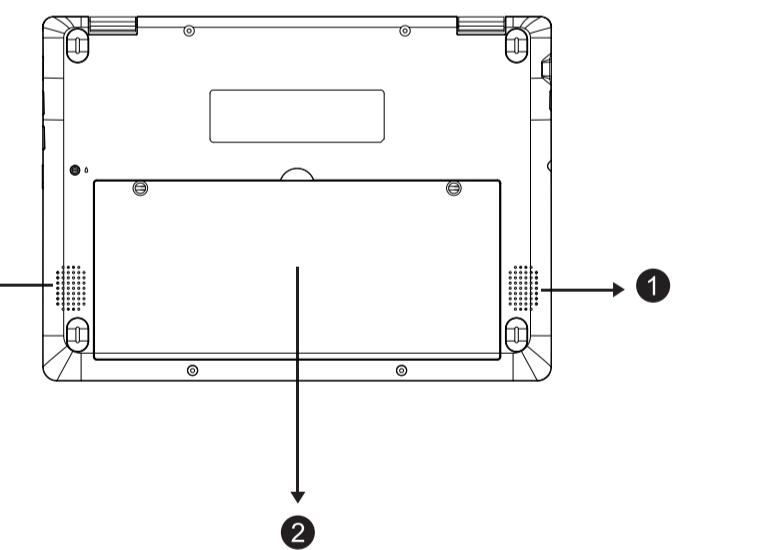

Some special keys sit along the top of Chromebook keyboards. If you're using a Windows keyboard with your Chromebook, the F keys at the top of the keyboard will work just like the keys below.

#	Item	Description
1	Speakers	Left and right speakers deliver stereo audio output.
2	Battery	The removable battery for your Chromebook.

Tip: To turn Caps lock on temporarily, press Alt + the search key.

4. Touchpad

When you're using a Chromebook, use the touchpad to move the pointer and select items on the screen. Here are some gestures and actions supported by the touchpad:

- Move the pointer:** Simply move your finger across the touchpad.
- Click:** Press down on the lower half of the touchpad. Since tap-to-click is on by default, you can quickly tap the touchpad to click.
- Right-click:** Click the touchpad with two fingers, or hold Alt while doing a single click.
- Middle-click:** Click the touchpad with three fingers.
- Scroll:** Place two fingers on the touchpad and move them up and down to scroll vertically, left and right to scroll horizontally. If you have Australian scrolling enabled, move two fingers up to scroll down. (It works in the same way as say, your smartphone or tablet.) If you have multiple browser tabs open, you can also swipe left and right with three fingers to quickly move between tabs.
- Swipe:** Quickly move two fingers left or right to go backward or forward on web pages or while using apps. You can also swipe up with three fingers to see all of your open windows.
- Drag and drop:** Click the item you want to move with one finger. With a second finger, move the item. Release both fingers to drop the item at its new location.

**The configuration covers all the SKUs, your Chromebook may differ.*

5. Specification

LCD	11.6 inch IPS, 1366x768 touchscreen
Platform	Intel Celeron Processor N3060*
Video	Intel HD Graphics 400
Audio	Two internal speakers One microphone on the camera One 3.5mm Audio combo jack
Memory	LPDDR3, 2GB/4GB *
Storage	eMMC, 16GB/32GB *
I/O Ports	Three USB 3.0 ports One HDMI port One Micro SD card reader One 3.5mm Audio combo jack One DC in
Camera	720p HD resolution camera
Wireless	Intel Dual Band Wireless-AC 7265
Battery	Polymer Li-ion battery, 5400mAh
Power	19V / 2.1A
OS	Chrome OS
Dimensions	292 x 209 x 22.5 mm
Weight	3.06 lbs.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Please Note: This device has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential environment. This device generates, uses and can radiate radio frequency energy, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.


However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation distance between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Caution: To comply with the limits for an FCC Class B computing device, always use the signal cord and power cord supplied with this device.

The Federal Communications Commission warns that changes or modifications to this device not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

European Notice
Products with the CE marking comply with both the EMC Directive (2014/30/EU), (92/68/EEC), R&TTE Directive (2014/53/EU) and the Low Voltage Directive (2014/35/EU) issued by the Commission of the European Community.

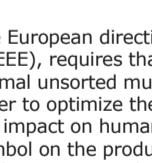

The European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimize their recovery and recycling of the materials they contain, and reduce their impact on human health and the environment. The crossed out "wheelie bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance, it must be separately collected.

Li-Polymer Battery Warning
This device contains a Li-polymer battery to power the clock and calendar circuitry.

Caution: Danger of explosion if battery is replaced incorrectly. Only qualified service technicians should replace and discard the battery. Replace only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.

WARNING: Travel Notice
To reduce the risk of electric shock, fire or damage to the equipment, do not attempt to power the computer with a voltage converter kit sold for appliances.

背面